


How to recover the U1 Writer

It is possible that U1 Writer resides in the error state and not able to perform any further function. So, check your U1 Writer when following conditions fit your situation:

1. No LED light when power on.
2. Has LED light at power on but UVCView.exe program does **not** detect the “8051 Writer U1”.


Please follow the correction steps to recover the 8051 Writer U1.

1. Connect the USB cable and power on the U1.
2. Press and hold the “Run” button.
3. Short C1 capacitor a while (near the yellow light bulb).

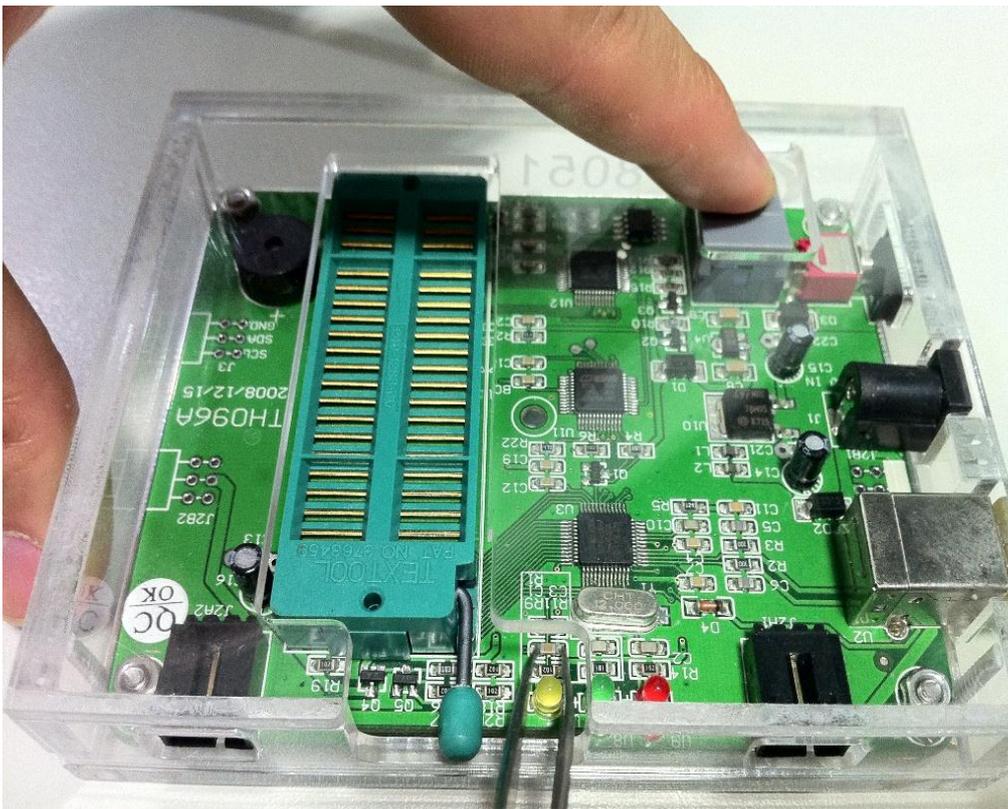

4. Release the “Run” button.


5. Check UVCView.exe to see if a device with VID: **0x0E6A** and PID: **0x030B** exist.

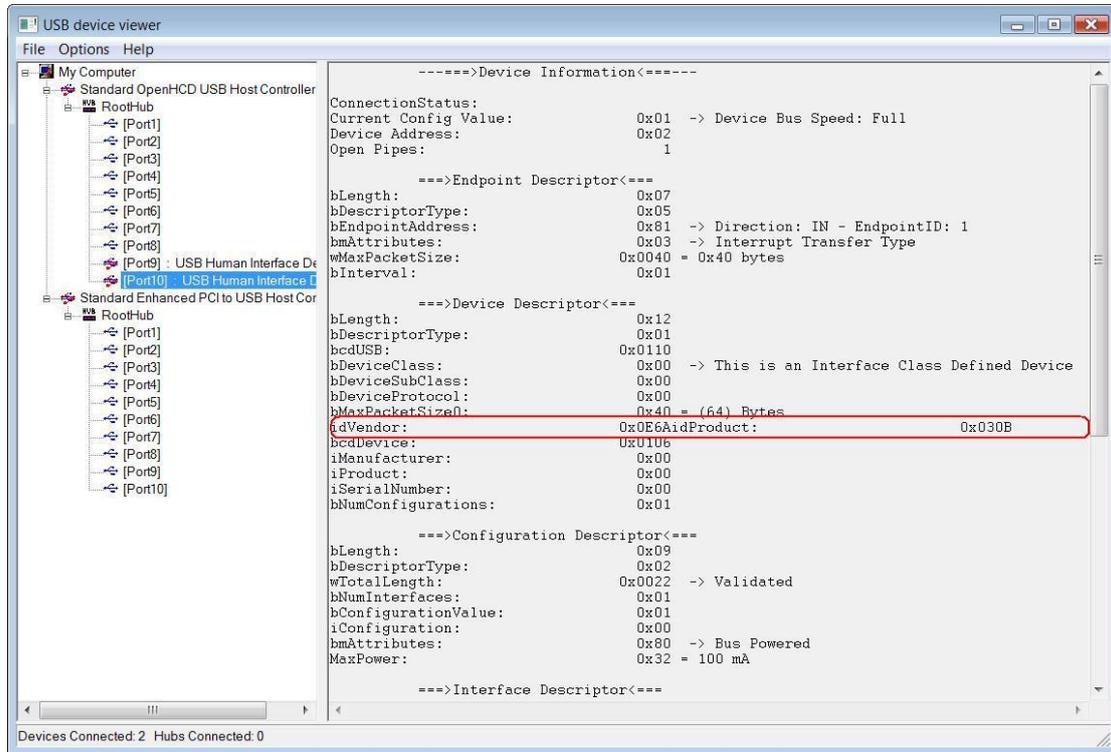

6. Run "U1 Writer Recovery(EN).exe" and click "Recover U1 Writer" to **Recover** the U1 firmware.



We should get a working 8051 Writer U1 device on the UVCView.exe.

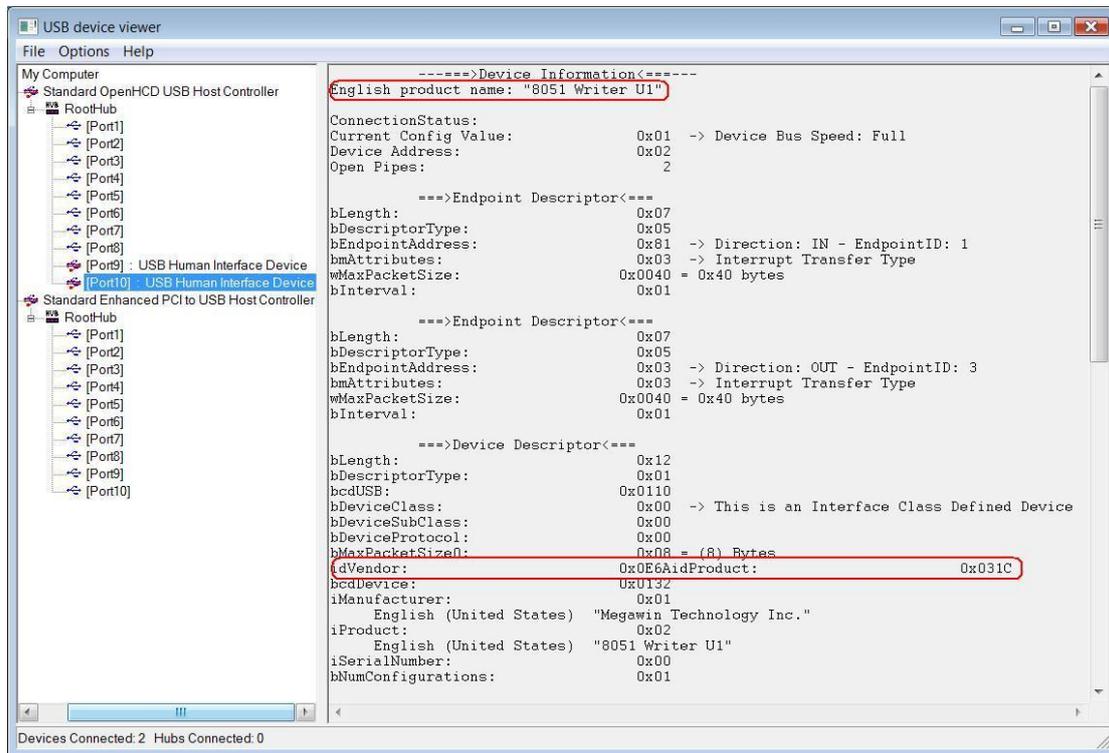

If you follow the correction steps and still not able to get the U1 Writer working, please contact Megawin sales for further technical support.